


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar  
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件

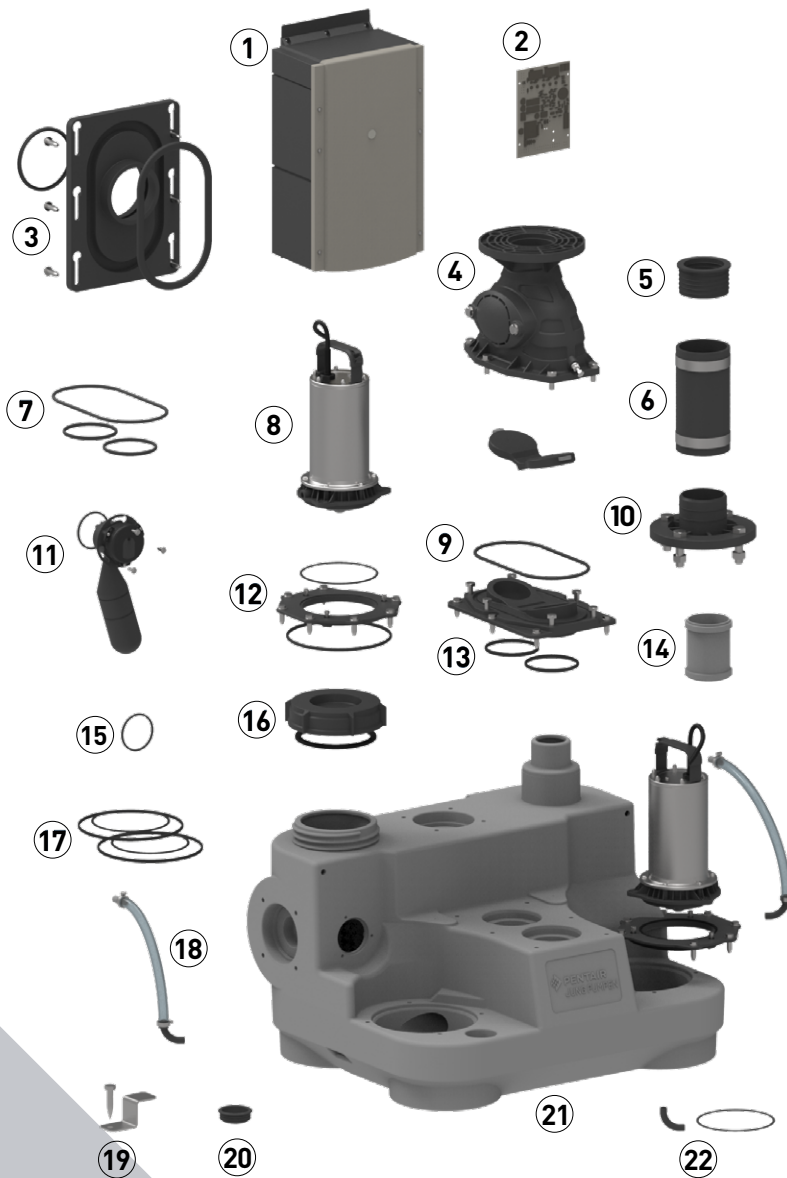

①	Steuerung	Control unit	<b>JP50503</b>
②	Steuerungsplatine	Control board	<b>JP47304</b>
③	Zulauf	Inlet	<b>JP50472</b>
④	Gehäuse R-Klappe	Housing reflux val.	<b>JP50566</b>
⑤	Adapter DN100/80	Adapter DN100/80	<b>JP50478</b>
⑥	Elast. Verbindung	Elastic connector	<b>JP42792</b>
⑦	Dichtungen Drucks.	Seals discharge.	<b>JP50483</b>
⑧	Pumpe	Pump	<b>JP50484</b>
⑨	Doppelklappe	Double flap	<b>JP46812</b>
⑩	Flansch	Flange	<b>JP42793</b>
⑪	Niveauerfassung	Level control	<b>JP50467</b>
⑫	Pumpenaufnahme	Mounting ring pump	<b>JP50489</b>
⑬	Flansch R-Klappe	Flange reflux valve	<b>JP50490</b>
⑭	Überschiebmuffe	Collar	<b>JP47287</b>
⑮	Dichtung Niveauerf.	Seal level control	<b>JP50479</b>
⑯	Wartungsdeckel	Service lid	<b>JP42798</b>
⑰	Dichtungen Hydr.	Seals hydraulic.	<b>JP50482</b>
⑱	Pumpenlüftung	Pump ventilation	<b>JP50471</b>
⑲	Auftriebssichg.	Anti floating	<b>JP50473</b>
⑳	Steckdichtung	Plug in seal	<b>JP45099</b>
㉑	Behälter	Tank	<b>JP50475</b>
㉒	Montageset Pumpe	Pump assembly kid	<b>JP50517</b>



①	Leitung	Cable	<b>ZBR49360</b>
②	Motordeckel	Motor cover	<b>ZBR20480</b>
③	Kondensator	Capacitor	<b>ZBR25560</b>
④	Stator + Gehäuse	Stator + Housing	<b>ZBR25540</b>
⑤	Lagersatz	Bearing set	<b>ZBR20710</b>
⑥	Schraubensatz	Screw set	<b>ZBR49230</b>
⑦	Rotorwelle	Rotor shaft	<b>ZBR20640</b>
⑧	Dichtungssatz	Seal set	<b>ZBR25510</b>
⑨	Flansch	Flange	<b>ZBR20700</b>
⑩	Laufblad	Impeller	<b>ZBR49200</b>
⑪	Dichtungssatz	Seal set	<b>ZBR49240</b>
⑫	Motoradapter	Motor adaptor	<b>ZBR49210</b>